


AC DELCO TYPE ALTERNATOR INSTALLATION V R 3 8 0 KIT 3005-A42

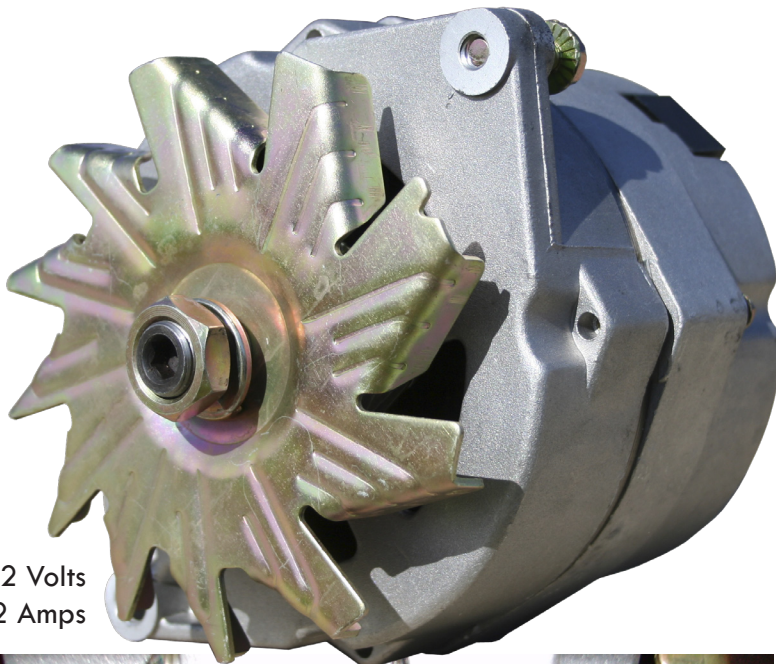


13.8/14.2 Volts
63.2 Amps

Remove original alternator bracket and replace with adapter and bracket from kit.

NOTE: keep all hardware from original alternator.


Remove alternator bracket and install aluminum adapter bracket using four (4) socket head screws. P/N M08X20S (See A1)

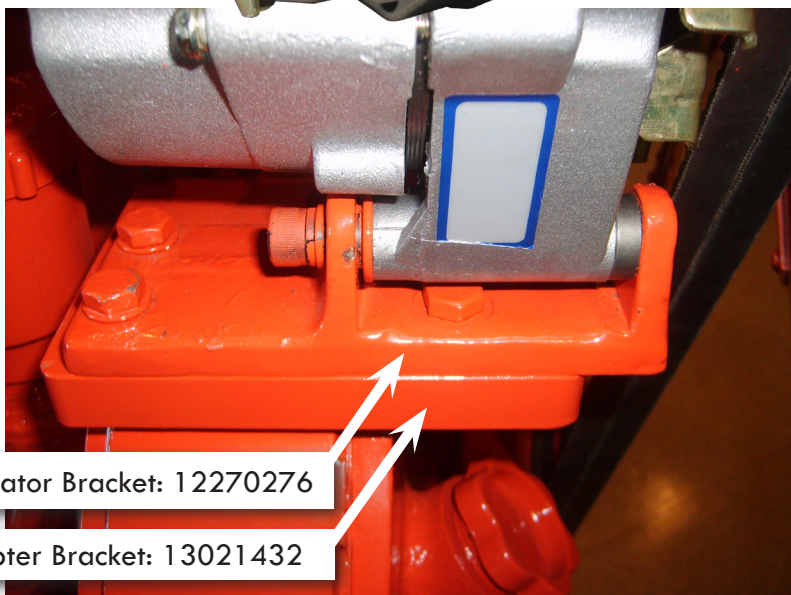

Alternator Bracket: 12270276


Adapter Bracket: 13021432

Remove original pulley from old alternator and reinstall on new alternator using fan and hardware supplied with new alternator.

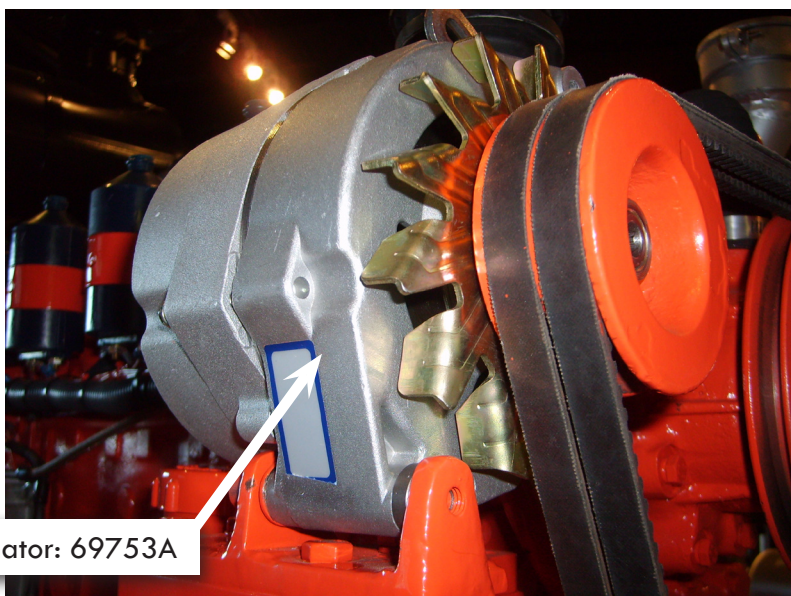

Alternator: 69753A

3005A62IS

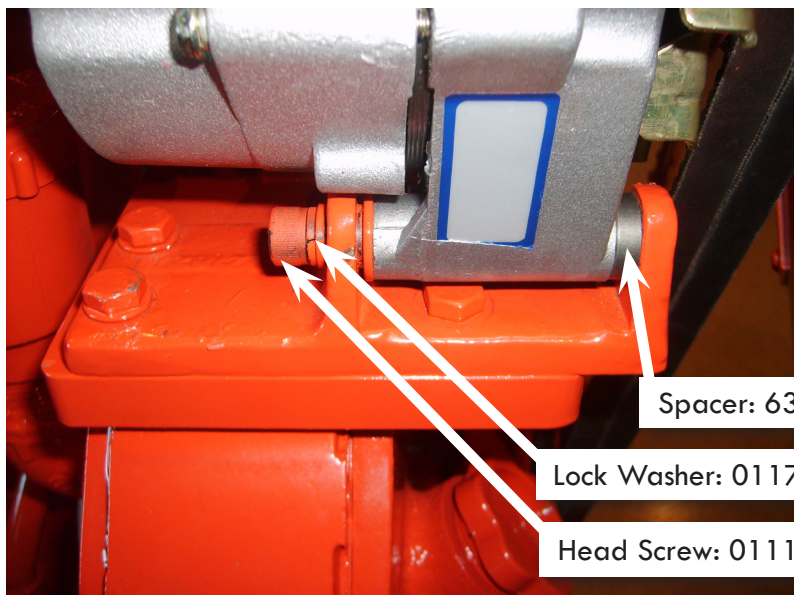


Install new alternator on bracket using the hardware supplied in kit and add 63809X spacers as needed.

Spacer: 63809X

Lock Washer: 01177981

Head Screw: 01110618

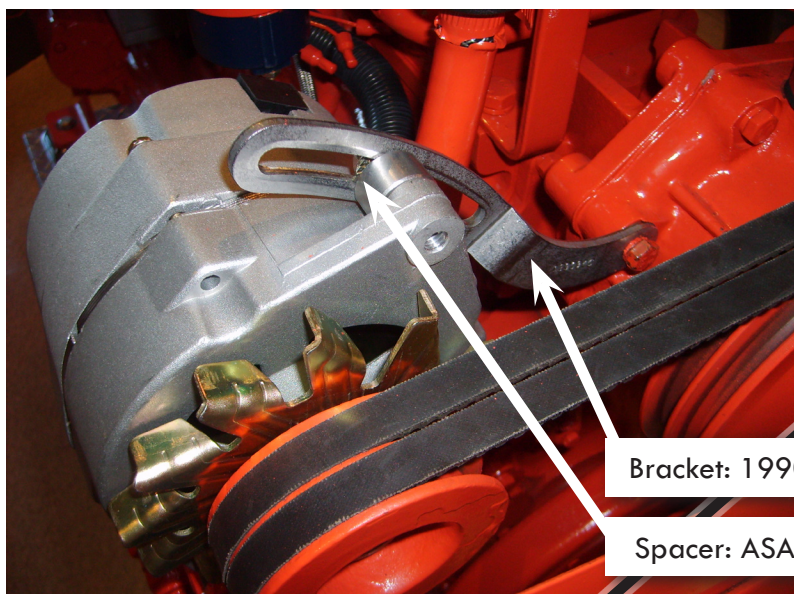

Remove bolt from water pump housing and reinstall using new alternator bracket and spacer.


NOTE: Don't forget to install spacer between bracket and alternator.

Attach belt adjusting bracket to alternator using bolt supplied with alternator.

Bracket: 199094C

Spacer: ASA-957

Install 10 gage wire to large terminal on back of alternator. The opposite end of this wire attaches to the battery "+" terminal.

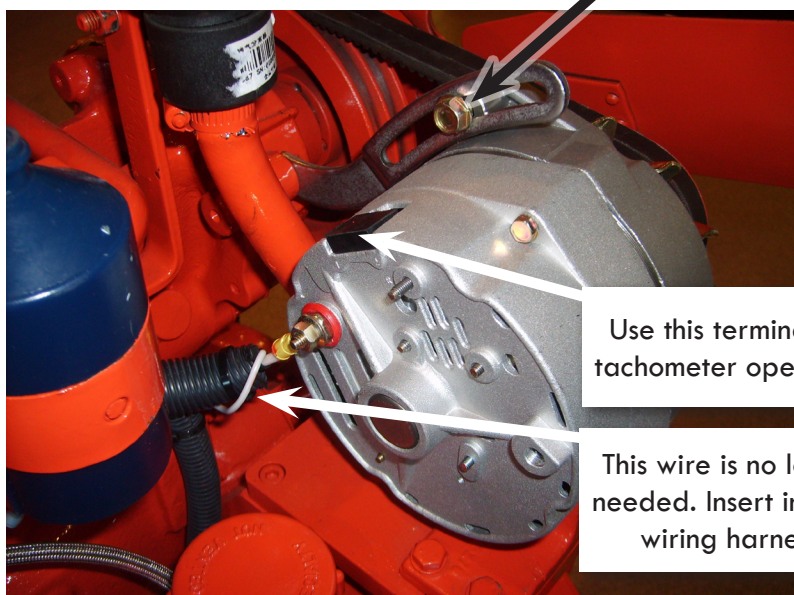

Install belts and tighten to proper adjustment. Before starting engine make sure all bolts are tight and belts are properly aligned.

After starting engine check for any unusual noise and adjust as needed.

Use this terminal for tachometer operation.

This wire is no longer needed. Insert into the wiring harness.

Check alternator voltage and check battery for proper water level. This is a good time to repair or replace all defective battery cables and wire connections.

© Arrow Engine 800 331 3662